


Hoofjack Hot Fit Plate Now Available

We now have an aluminum plate, designed to fit one section of the Hoofjack base. This plate is designed to allow farriers who hot-fit to have a place to set the hot shoe while working on the hoof. The plate is already drilled and screws are provided.

For more information and to find a dealer near you, visit www.farrierproducts.com.

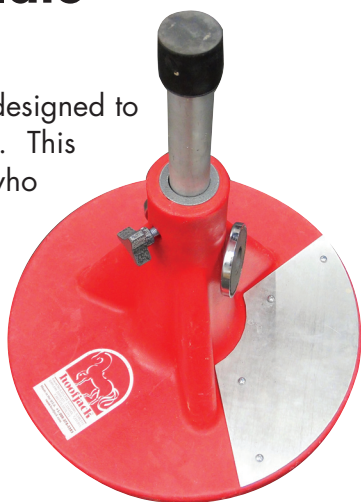

March 2022 Facebook Giveaway

During the month of March, twenty winners will receive (1) bottle of the Diamond Frog Dressing – gel formula. Two winners will receive (1) bottle of the Diamond Frog Dressing, (1) jar of Allen's Blue Powder, (1) jar of FootPro CS+ and (1) Diamond Hoof Pick.

Look for posts on FPD's facebook page to register for a chance to win the monthly free give-away. This giveaway is only valid in the U.S. and Canada.



NEW PRODUCTS

Rubber Belt Cleaning Stick

The new 6" Rubber Belt Cleaning Stick is now available and fits well on a vertical section of the Standard Hoofjack. This is a nice accessory for anyone using the Hoof Buffer, allowing them to clean their belts as they use them while under the horse.

Installation instructions for the Rubber Cleaning Stick can be found on the next page ▶



3D Support Pads

3D Hoofcare Pads (sizes 3, 4 and 5) in the Eclipse, Half Mesh, Half Mesh Degree and Full Mesh styles are available

from FPD dealers. Size 6 Half-Mesh, Half-Mesh Degree and Full Mesh are coming soon. The size 6 will fit feet that are size 4 and 5 in Kerckhaert sizes.



If you are interested, check with your dealer or visit FPD's Dealer Locator at www.farrierproducts.com/locations.

View more information and photos on FPD's Facebook Page ▶ facebook.com/FarrierProductDistribution/

Rubber Belt Cleaning Stick Installation




HANDY ADD-ON FOR YOUR HOOFJACK

The FootPro Rubber Belt Cleaning Stick attached to a Hoofjack is a great way to manage dirt build-up on your hoof buffer sleeves. Keeping them clean improves performance and the life of the sleeve. ■



1. WHAT YOU NEED:


- TWO SCREWS LIKE THOSE SHOWN (AVAILABLE AT MOST HARDWARE STORES)
- 5/16" OR 3/8" DRILL BIT
- FOOTPRO RUBBER BELT CLEANING STICK
- BATTERY-OPERATED SCREW DRIVER (NOT SHOWN) AND MATCHING BIT
- SELF-PIERCING SCREWS (1.5" LONG WILL EASILY PENETRATE THE HOOFJACK MATERIAL)

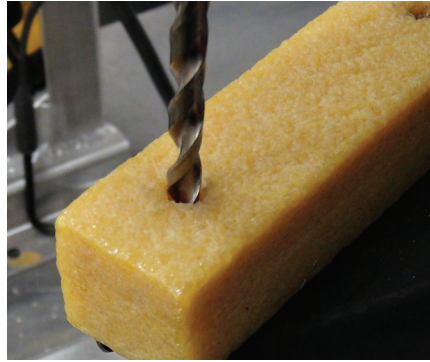

2. THE FOOTPRO RUBBER CLEANING STICKS DO NOT COME PRE-DRILLED. DRILL APPROXIMATELY HALF WAY INTO THE STICK WITH A 5/16" OR 3/8" BIT.




3. LAY THE HOOFJACK ON ITS SIDE, BRACE IT AND APPLY THE SELF-PIERCING SCREWS IN YOUR HOLES. MAKE SURE YOU TIGHTEN UNTIL THE HEAD IS SUNKEN INTO THE STICK ABOUT 3/4", NOT JUST FLUSH WITH THE OUTSIDE.

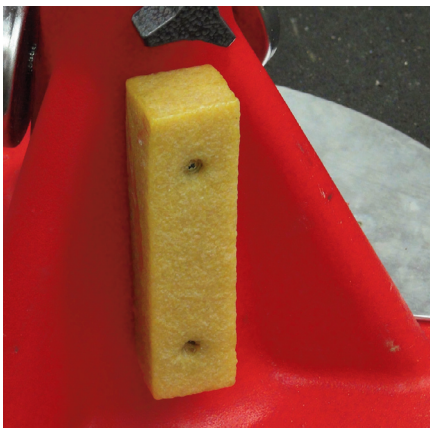

4. TWO SCREWS SHOULD BE ADEQUATE. MOUNTING BELOW THE TENSION KNOB IS THE BEST LOCATION.



5. STICK APPLIED AND READY TO GO.

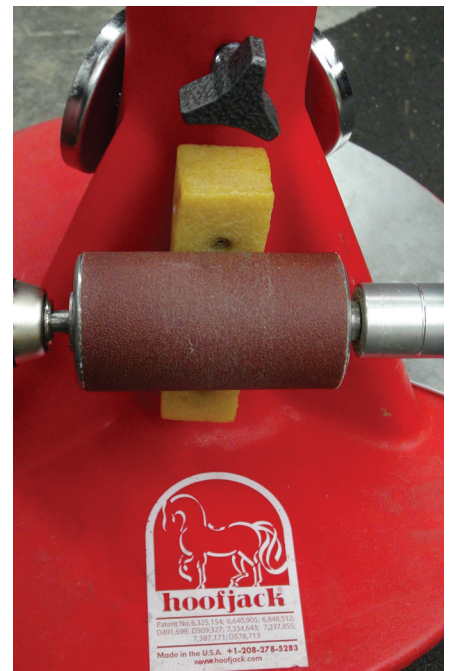

6. WHEN YOUR BUFFER SLEEVE GETS DIRT BUILDUP, SIMPLY RUN THE TOOL AND APPLY SLIGHT PRESSURE ON THE STICK. IT WILL CLEAN UP VERY QUICKLY.